

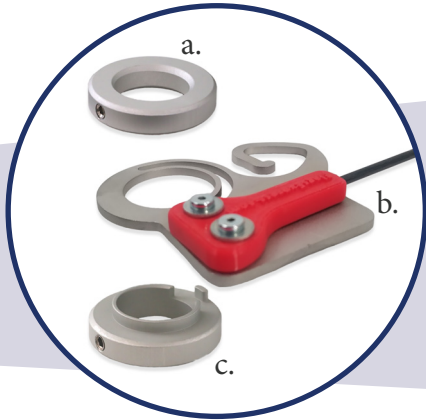


NON-TANGLE AVENUE FLAG SET

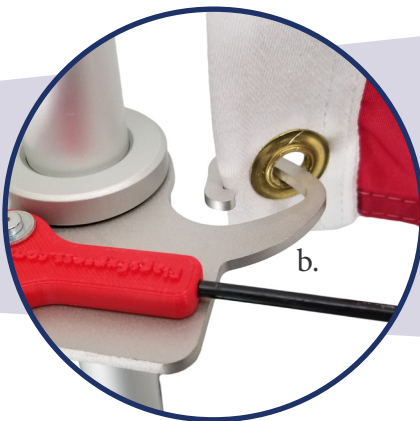

Directions:

1. Measure the distance from grommet to grommet on your flag.
2. Take the measured result, add 3" for tolerance, and measure from pole end to pole middle. Mark spot with pencil or electrical tape.
3. Slide toothed retainer ring (c) onto pole, followed by the red flag stretcher (b). Align tooth into groove and top with retainer ring (a).
4. Balance pole on two chairs to hang the stretcher straight down.
5. Align complete retainer ring group (a, b, c) with your measured mark and tighten the retainer ring hex screws with the provided Allen wrench.
6. Slip the top flag hook (d) over the pole end. Stand pole vertically.
7. Slide each flag grommet onto each flag ring (b, d) to attach flag.
8. Position top flag hook (d) so that flag is taut, but still has some slack.

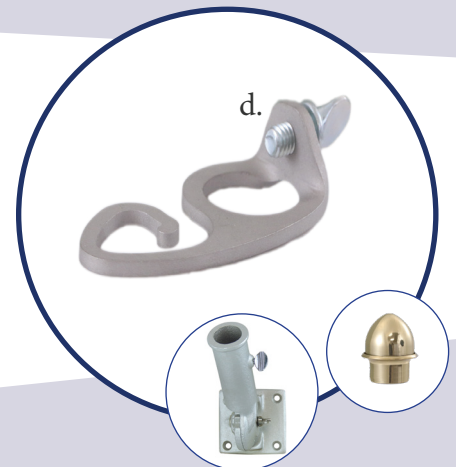

9. Place flag into red clamp of flag stretcher and tighten, both the top flag hook and red clamp thumbscrews, with pliers.
10. Slide the brass acorn ornament atop of the pole.
11. Properly affix the mounting bracket to your desired location by using appropriate screws (hardware not provided).
12. Insert pole snugly into mounting bracket.*



Note: *Ensure pole reaches complete bottom of mounting bracket to provide best support for your flagpole and prevent breakage.



Better Flags for Earth & Beyond™

American Flags Express | 2615 W Custer Ave, Butler, WI 53007 | 262-783-4800